

### How To Cook Using the Timer or the Probe

1. Press the ON/OFF button ①.
2. Preheat the appliance.
3. Touch the icon for the desired cook mode.
  - Steam ②
  - Combination ③
  - Convection ④
4. Touch the oven temperature icon ⑤.
5. Touch the up arrow icon ⑪ or the down arrow icon ⑬ to set the cook temperature.

#### To cook using the timer

1. Touch the cook time icon ⑧.
2. Touch the up arrow icon ⑪ or the down arrow icon ⑬ to set the cook time (hh:mm).

*The controller sounds an alarm and cooking stops when the cook time has elapsed.*

#### To cook using the probe

1. Touch the probe temperature icon ⑩.
2. Touch the up arrow icon ⑪ or the down arrow icon ⑬ to set the probe temperature.

*The controller sounds an alarm and cooking stops when the probe senses that the internal food temperature matches the set probe temperature.*

3. If desired, touch the fan speed icon ⑭ and set the fan speed to high or low.
4. Load food into the appliance.
5. Touch the START/STOP icon ⑫.



### How To Preheat the Appliance

1. Touch the convection cooking mode icon ④.
2. Touch the oven temperature icon ⑤.
3. Touch the up arrow icon ⑪ or the down arrow icon ⑬ to set the preheat temperature.
4. Touch the cook time icon ⑧.
5. Touch the up arrow icon ⑪ or the down arrow icon ⑬ to set the preheat time (hh:mm).
6. Touch the START/STOP icon ⑫.

*The controller sounds an alarm and preheat stops when the preheat time has elapsed.*

### How To Cool Down the Appliance

**NOTE:** You cannot cool down the appliance during a cooking cycle.

1. Touch the cool down button ⑭.
2. Touch the up arrow icon ⑪ or the down arrow icon ⑬ to set the cool down temperature. The cook temperature field ⑥ displays the set cool down temperature.

3. Open the appliance door.

**NOTE:** The cook time field ⑨ displays “dOOr” if the door is not open.

4. Touch the START/STOP icon ⑫. The fan activates.

*The cook time field ⑨ displays the cavity temperature while the oven cools down. The fan turns off when the cavity temperature matches the set cool down temperature.*

### How To Turn Off the Appliance

1. Press and hold the ON/OFF button ① for five (5) seconds.

### How To Clean the Appliance

**NOTE:** Side racks and shelves can remain inside the appliance during cleaning.

1. Remove any solid waste from the drain screen and the appliance interior.
  - If the appliance has the optional grill grate, remove the grate from the appliance and wash it separately in hot, soapy water.
  - If the appliance has a smoker, remove the smoker tray.

2. Touch the cleaning icon ①. The cook time field ② displays “CLn4.”

**NOTICE:** If the appliance is too hot, the cook time field ② displays “dOOr.”  
Cool down the appliance before cleaning.

3. Remove the drain screen, place the required number of CombiClean® tablets in the drain, and reinstall the drain screen.

**NOTE:** If desired, use additional tablets or spray CombiClean liquid cleaner inside the appliance.

4. Close the appliance door.
5. Touch the START/STOP icon ③.  
*The appliance beeps once and shuts off when the cleaning cycle is complete.*
6. After the cleaning cycle is complete, open the appliance door approximately 2” (50mm) to allow the appliance to air dry.

